


- NL** Ratelsleutel
- GB** Ratchet
- D** Ratschenschrauber
- F** Clés à Rochet
- I** Cricchetti
- DK** Skraldenøgler
- N** Skraller

- 1014100A
- 1014100A
- 1014100A
- 1014100A
- 1014100A
- 1014100A
- 1014100A



2013-12

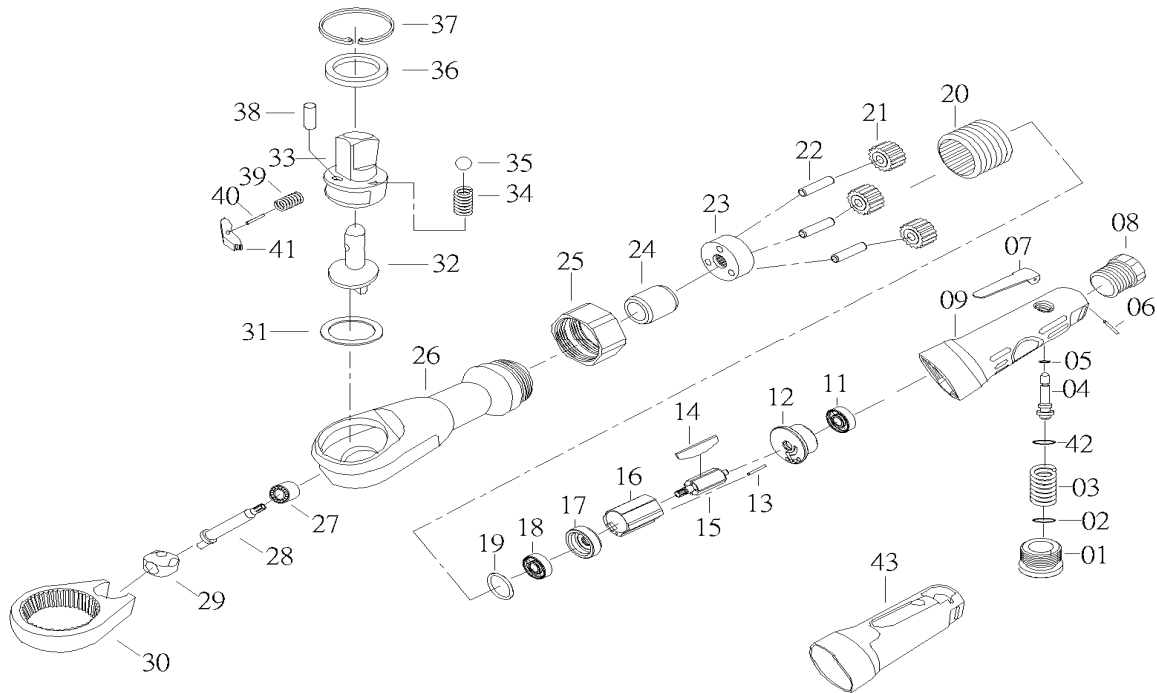

Index	Partnumber	description	qty	Index	Partnumber	description	qty
1	RPSCRA38A01	Plug	1	25	RPSCRA38A25	Clamp Nut	1
2	RPSCRA38A02	O-ring	1	26	RPSCRA38A26	Ratchet Housing	1
3	RPSCRA38A03	Throttle Valve Spring	1	27	RPSCRA38A27	Needle Bearing	1
4	RPSCRA38A04	Valve Stem	1	28	RPSCRA38A28	Crank Shaft	1
5	RPSCRA38A05	O-ring	1	29	RPSCRA38A29	Drive Bushing	1
6	RPSCRA38A06	Spring Pin	1	30	RPSCRA38A30	Ratchet Yoke	1
7	RPSCRA38A07	Throttle Lever	1	31	RPSCRA38A31	Washer	1
8	RPSCRA38A08	Air Inlet Bushing	1	32	RPSCRA38A32	Reverse Button	1
9	RPSCRA38A09	Motor Housing	1	33	RPSCRA38A33-2	Ratchet Anvil 3/8"SQ.	1
11	RPSCRA38A11	Ball Bearing	1	34	RPSCRA38A34	Friction Spring	2
12	RPSCRA38A12	Rear End Plate	1	35	RPSCRA38A35	Steel Ball	2
13	RPSCRA38A13	Spring Pin	1	36	RPSCRA38A36-2	Thrust Washer 3/8"SQ.	1
14	RPSCRA38A14	Rotor Blade	4	37	RPSCRA38A37	Retaining Ring	1
15	RPSCRA38A15	Rotor	1	38	RPSCRA38A38	Pawl Pivot	1
16	RPSCRA38A16	Cylinder	1	39	RPSCRA38A39	Spring	1
17	RPSCRA38A17	Front End Plate	1	40	RPSCRA38A40	Spring Cap	1
18	RPSCRA38A18	Ball Bearing	1	41	RPSCRA38A41	Ratchet Pawl	1
19	RPSCRA38A19	Washer	1	42	RPSCRA38A42	O-Ring	1
20	RPSCRA38A20	Internal Gear	1	43	RPSCRA38A43	Protecting Rubber	1
21	RPSCRA38A21	Planet Gear	3			(Option to be used)	
22	RPSCRA38A22	Gear Pivot	3				
23	RPSCRA38A23	Gear Plate	1				
24	RPSCRA38A24	Bushing	1				