



0	PQN1F.05	Screw
01	PQN11A,04	Small foot
02	PQNG2500,02	Tank
03	PQN6S,13	Packing
04	PQN4B,01	Ring seeger
05	PQN12A,01	Filter
06	PQNG2500,08	Filter fastening
07	PQN3B,01	Rove bonded
08	PQN5A,03	Sphere
09	PQN70,04A	Body pump
10	PQN70,61	Body max pression valve
11	PQN70,61,3	Spring stop
12	PQN70,61,2	Spring
13	PQN70,61,1	Spring guide
14	PQN5A,02	Sphere
15	PQN1C,16	Screw
16	PQN3C,01	Rove
17	PQN6M,03	Packing in paper
18	PQN3B,03	Rove bonded
19	PQN70,05P1/P2/P3	Plunger (700/500/300 bar)
20	PQN6E,02/6E,03/6E,06	Packing (700/500/300 bar)
21	PQN70,05K1/K2	Bronze bearing (700/500 bar)
22	PQN70,06P1/P2	Plug (700-500/300 bar)
23	PQN6S,02	Packing
24	PQN70.14A	Spring
25	PQN70.07K1/K2/K3	Casting cup
26	PQN70.08K1/K2/K3	Plunger
27	PQN6R,01	Packing
28	PQN6A,06	Packing
29	PQN70,22	Plug
30	PQN70,09	Ram
31	PQN60,01	Packing
32	PQN70,10	Reverser piston
33	PQN6S,06	Packing
34	PQN1C,20	Srew
35	PQN70,12	Cylinder
36	PQN6M,01	Packing in paper
37	PQN6M,02	Packing in paper
38	PQN70,47A	Spring
39	PQN6A,18	Packing

40	PQN1C,04	Screw
41	PQN70,20	Casting packing
42	PQN6E,02	Packing
43	PQN8A,04	Plug
44	PQN70,21	Air block
45	PQN6A,23	Packing
46	PQN70,53	Needle
47	PQN1C,21	Screw
48	PQN9A,02	Silencer in rubber
49	PQN9A,01	Silencer in nylon
50	PQNG2500,05	Oil block
51	PQN71,11	Oil unloaded pin
52	PQN70,50	Spring
53	PQN3B,02	Plug
54	PQN15C,05	Stud
55	PQN8A,02	Plug
56	PQN70,16	Unloaded needle
57	PQN70,13	Casting no return valve
58	PQN70,18	Unloaded casting
59	PQN70,15	Unloaded pin
60	PQN5A,01	Sphere
61	PQN70,42	Spring
62	PQN5A,06	Sphere
63	PQN70,13	Guide sphere
64	PQN6A,20	Packing
65	PQN70,26	Spring
66	PQNG2500,09	Air Drainage pin
67	PQN6Z,04	Packing
68	PQNG2500,10	Spring
69	PQN3A,03	Rove
70	PQN4A,01	Ring seeger
71a	PQN8A,01	Plug
7b	PQNG2500,01	Plug with rod
72	PQNG2500,01	Cover tank
73	PQN15D,02	Stud
74	PQNG2500.03	Superior body pump
75	PQN1F.05	Screw
76	PQNG2500,06	Pedal pin
77	PQN4C,01	Ring benzing
78	PQNG2500,04	Pedal
79	RQAB71RK	Repairkit







