

FORCE 903T8

Rear trailing arm bush remover / installer for FORD / VOLVO Manual



1. Contents :

- A : 1ps Thrust plate
- B : 1ps Insertion/extraction slotted cup
- C : 2ps Depth control legs
- D : 1ps Bushing puller
- E : 1ps Thrust screw

2. Introduction :

- ❖ Suitable for the removal / installation of the rear trailing arm mounting bushes on Ford vehicles.
- ❖ Can be used in-situ without removing the arm from the

vehicle.

※ Also suitable for some Volvo vehicles that share the same Ford platform.

※ Application:

Ford : Mondeo MK4 (07~15), S-Max (06~15),
Galaxy (06~15)

Volvo: S60 (10~18), S80 (06~16), V70 (07~16), XC60
(08~18), XC70 (07-16)

3. Instructions :

※ **Bush removal:**

- Place the thrust plate (A) on to the trailing arm. (Fig 1)
- Apply bushing puller (D) and extraction slotted cup (B) for pressing the bushing out from the socket.
- Using a suitable wrench continue increasing the load until the bush is pushed out. (Fig 2)

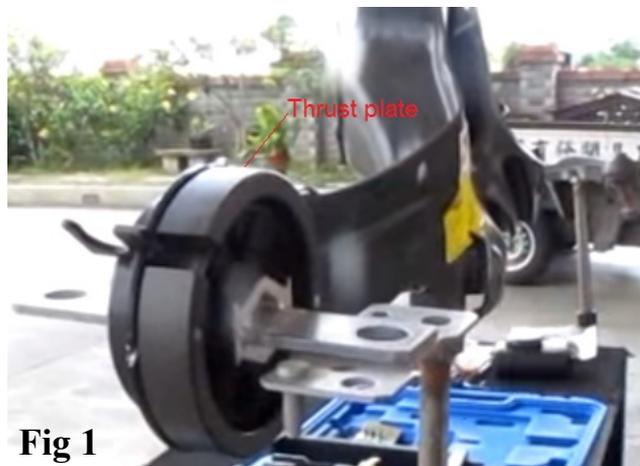


Fig 1



※ **Inserting new bush:**

- Place the thrust plate(A) on to the trailing arm and then the new bush inside the trailing arm. (Fig 3)
- Install the depth control legs(C) on to the slotted cup(B).
- Next, place the puller with thrust plate and tighten the bolt and press the bushing in till the depth control legs touches the trailing arm.(Fig 4)
- Correctly pressed in bushing.

