

## Nockenwellen-Distanzstücke für VAG 2.0 TFSI





### ALLGEMEINE INFORMATION

Dieser Nockenwellen-Distanzstücksatz dient zur Positionierung der Nockenwellen-Gleitstücke und ist geeignet für 4-Zyl. 2,0 TFSI Benzin-Direkteinspritzmotoren, z.B. verbaut im Audi A4 2008>, Audi Q5 2009>. Der Satz enthält 4 Distanzstücke (B) zu verwenden wie OEM T40191/1 und 1 Distanzstück (A) zu verwenden wie OEM T40191/2.

### WICHTIGER HINWEIS

Diese Anleitung dient als Kurzinformation und ersetzt keinesfalls ein Werkstatthandbuch. Verwenden Sie immer eine fahrzeugspezifische Serviceliteratur, dieser entnehmen Sie bitte technische Angaben wie z.B. Drehmomentwerte und Hinweise zur Demontage, Montage usw.

### VERWENDUNG

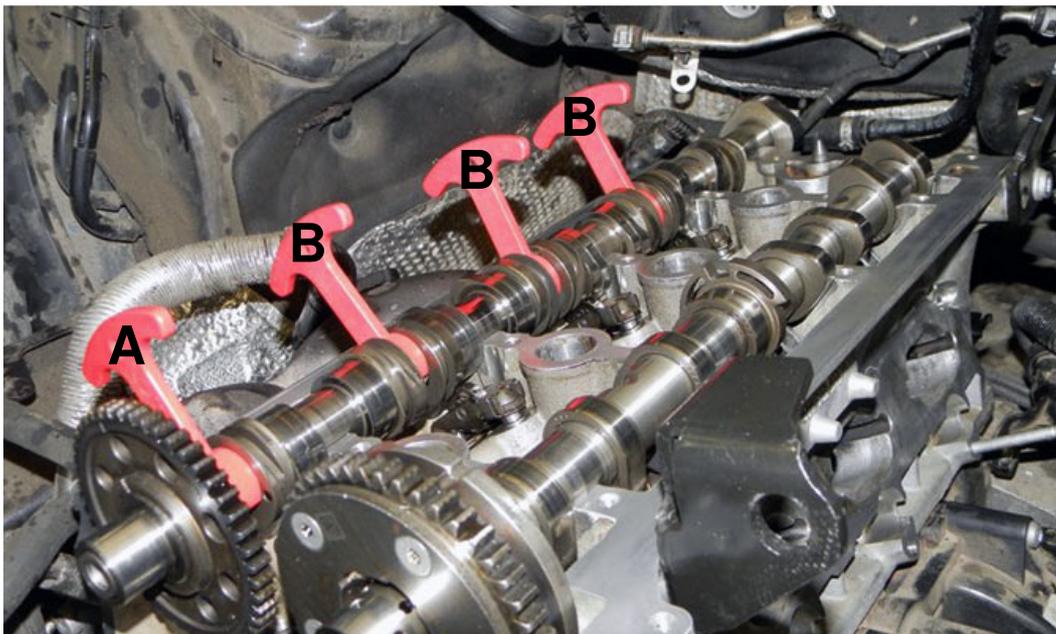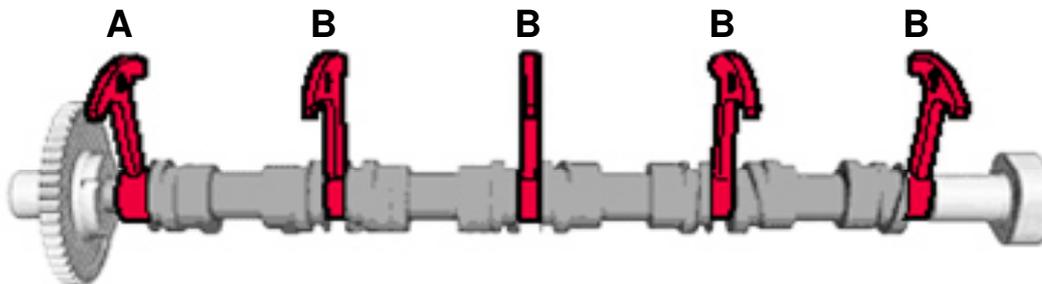

## Camshaft Spacer for VAG 2.0 TFSI



### GENERAL INFORMATION

This Camshaft Spacer Set is designed for positioning of camshaft sliding pieces and is suitable for 4-cyl. 2.0 TFSI fuel direct injection engines, e.g. built in Audi A4 2008>, Audi Q5 2009>.

This set includes four spacers (B) to be used as OEM T40191/1 and one spacer (A) to be used as OEM T40191/2.

### IMPORTANT NOTE

This manual is just brief information and will not replace a workshop manual.

Always consult specific service literature for information about torques, assemblies and disassemblies etc..

### APPLICATION

