


RQN1053

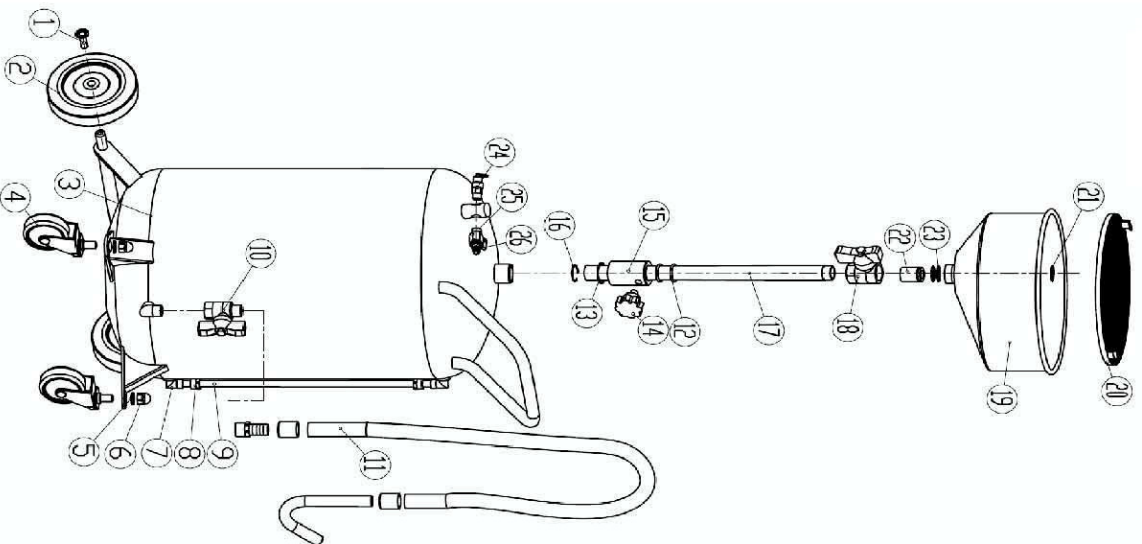


PARTS LIST

No.	Description	Qty
1	Screw	2
2	Wheel	2
3	Reservoir	1
4	Swivelling wheel	2
5	Washer	2
6	Acorn nut	2
7	Nut	2
8	Elbow fitting	2
9	Tube with label	1
10	Ball valve	1
11	Discharging hose	1
12	O-ring	2
13	O-ring	1
14	Hardwheel	1
15	Seal	1
16	Spring block	1
17	Adjusting steel tube	1
18	Ball valve	1
19	Funnel	1
20	Filter plate	1
21	Nut	1
22	Stuff assembly	1
23	O-ring	2
24	Safety valve	1
25	Ball valve	1
26	Quick plug	1

ECONOMICAL AIR-OPERATED WASTE OIL DRAIN MANUAL

RQN1053

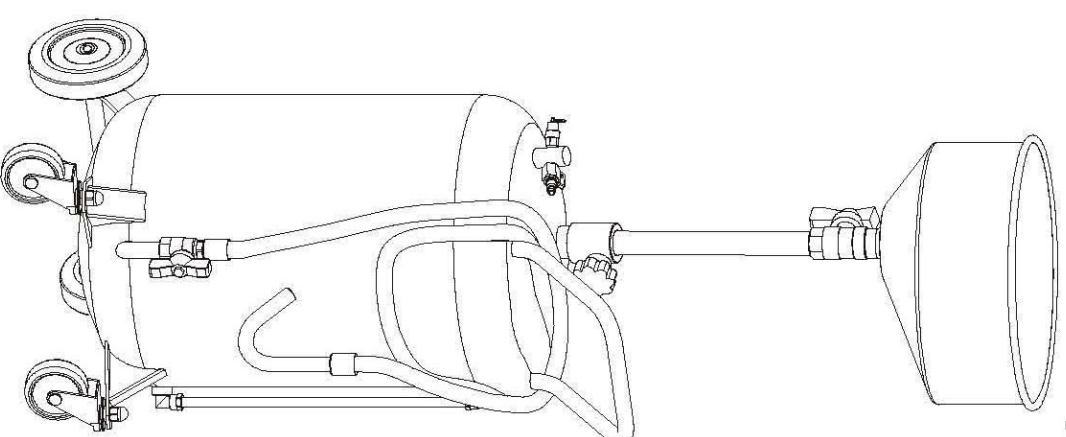

⚠ WARNING

- For waste oil use only.
- Do not expose the reservoir to any source of heat.
- While extracting high temperature oils, keep hands and face protected.
- Only use the device for the purpose for which it has been designed.
- Do not modify any component of the equipment.
- Only use original spare parts.
- Contract American lubrication if you need any additional information.


ASSEMBLY

Fig. 1: The handle B weld on th tank.

Fig. 2: Attach ball valve C to the drain basin and tighten it with a suitable wrench.

Fig. 3: Connect the assembled group, the reservoir tank, by tightening ring nut D using a suitable wrench and screw with handwheel E.

Fig. 4: Attach the hose with the ball valve and adapter F on the base of the units tank.

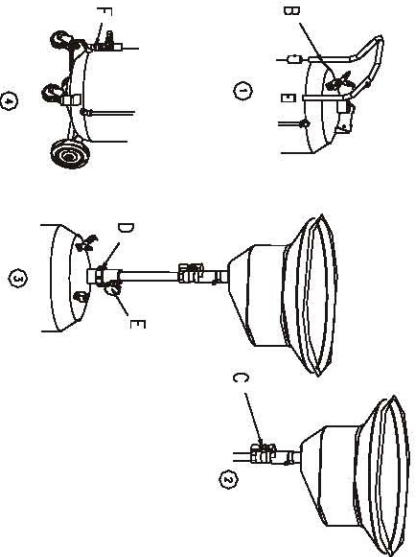

CAUTION

Never fill the reservoir over the maximum level indicated by the gauge that is located on the side of the reservoir.

EMPTYING IMPORTANT!


Fig. 6: Make sure that valve C is closed. Make sure that screw E is tightened.

Attach the end of the drain hose to a suitable waste oil container.

Open ball valve G.

Connect compressed air (7psi/0.5 Bar) to quick couple M.

After the fluids have been transferred from the unit's reservoir tank close ball valve G. The unit is equipped with a safety valve that has been factory calibrated at 1 bar (14 PSI).

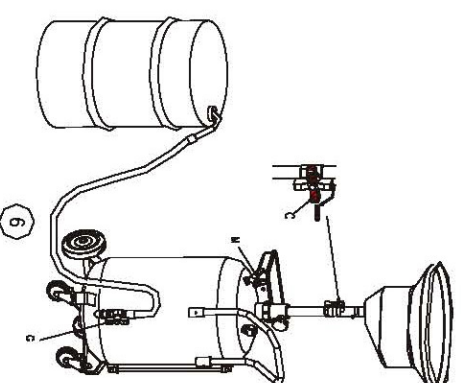

OPERATION

Fig. 5: To raise and lower the catch basin loosen knob E, move the basin to the desired height and re-tighten knob E.

